

Document Camera

- Make sure "Document Camera" or "Visual Presenter" input is selected.
- Make sure the document camera is powered on and the lens is facing down.

Blu-Ray/DVD

- Make sure the proper input is selected (in rooms with both a standard DVD player and a Blu-Ray player make sure the input corresponds to the device you have put your disc into).

VHS Combo Unit

- Make sure the proper input is selected (either "Video" or "VCR" or "Aux" depending on the room).
- Make sure the unit is powered on.
- If the unit is a combination DVD player and VCR, make sure the unit itself is set to VCR (there will be a DVD/VCR toggle switch on the unit)

iPad/iPod Touch/iPhone

- Projection capability is dependent on the application being used. For further information, please refer to: <http://support.apple.com/kb/HT4108>

Aux Input

- Make sure the "Aux" input is selected on the switcher/touch panel
- Make sure RCA cables are connected properly (colors should match)