



## 145 4<sup>th</sup> Avenue Instructions

### To Power on projector:

1. press **ON/OFF** button and release
2. projector needs 30 seconds to power on

### To display a computer image:

1. from installed laptop, press *PC* on switcher  
**OR**  
from personal laptop press *laptop 1* on switcher
2. connect **VGA** cable from switcher to laptop
3. power on laptop
4. volume control on Switcher
5. if the image **DOES NOT** appear on the screen:

a. **PC USERS-**  
depress "FN" key and LCD/CRT  
key together once or twice

b. **MAC USERS-**  
open apple menu, select  
*control panel*, click *monitors*  
icon, then *arrange* icon.  
Overlap monitor icons.

### To display image from DVD/VCR:

1. turn on DVD/VCR player
2. press *DVD/VCR* on switcher
3. image will display
4. volume control on switcher

### To play A CD:

1. turn on DVD/VCR player
2. press *DVD/VCR* on switcher
3. use the DVD player for CD playback
4. volume control on switcher
5. projector should remain **OFF** when playing CD

### To Power off projector:

1. press **ON/OFF** button and release
2. projector needs 30 seconds to power off

TURN OFF THE PROJECTOR AT THE CONCLUSION OF YOUR CLASS.

**call Campus Media x82655 for assistance**