



 
25 West 4th Street Rooms C1, C2, C3, C4, C5, C7, C8, C9, C10 C11, C12, C13, C14, C15, C17, C18, C19, C120 Equipment Instructions

To display a computer image from your laptop:

1. Connect your laptop to “PC 1” Input on switcher above.




2. Press “Display Power”. Projector will power on with EIKI logo for approx. 30 sec.



3. Press “PC 1” on switcher.

 4. Image should appear. If a blue screen appears, press the “MODE” button once.




To display a video image from DVD:

1. Press “Display Power”. Projector will power on with EIKI logo for approx. 30 sec.




2. Press “DVD” on switcher.

 3. Image should appear. If a blue screen appears, press the “MODE” button once.




To display a video image from VHS:

 1. Press “Display Power”. Projector will power on with EIKI logo for approx. 30 sec.



2. Press “VHS” on switcher.

 3. Image should appear. If a blue screen appears, press the “MODE” button once.



TURN OFF THE PROJECTOR AT THE CONCLUSION OF YOUR CLASS

Call Campus Media x82655 for assistance.