



# Silver Center Rooms 804, 805, 806, 808 & 810 Equipment Instructions

## To power on projector:

1. press *display power* and release
2. projector needs 30 seconds to power on

## To lower screen:

1. switch located by chalkboard in front of classroom

## Display computer image:

1. press *computer* on switcher
2. connect VGA cable from podium to laptop
3. power on laptop
4. if the image DOES NOT appear on screen:

a. **PC USERS-**  
depress “FN” key and LCD/CRT  
key together once or twice

b. **MAC USERS-**  
open apple menu, select *control  
panel click monitors* then *arrange*  
icon. Drag monitor icon onto the  
other

## To display image from DVD:

1. turn on DVD
2. press *DVD* on switcher
3. image will display
4. DVD volume control on switcher

## To display image from VCR:

1. turn on VCR
2. press *VCR* on switcher
3. image will display
4. VCR volume control on switcher

## To display image from Document Camera:

1. turn on DOCUMENT CAMERA
2. press *DOCUMENT CAMERA* on switcher
3. image will display

## To display image from Slide Converter:

1. turn on SLIDE CONVERTER
2. press *SLIDE CONVERTER* on switcher
3. image will display

## To play a CD:

1. turn on DVD player
2. press *CD* on switcher
3. projector should remain **OFF** when using CD playback.

## To power off projector:

1. press *display power* and release
2. projector needs 30 seconds to power off

TURN OFF THE PROJECTOR AT THE CONCLUSION OF YOUR CLASS

**Call Campus Media x82655 for assistance.**